

THINK TECH FORWARD

Stock code: 300415


Designed by YIZUMI, March 2026

YIZUMI

LS

530T-1100T

LS SERIES INJECTION MOLDING MACHINE
FOR DEEP-CAVITY PRODUCT

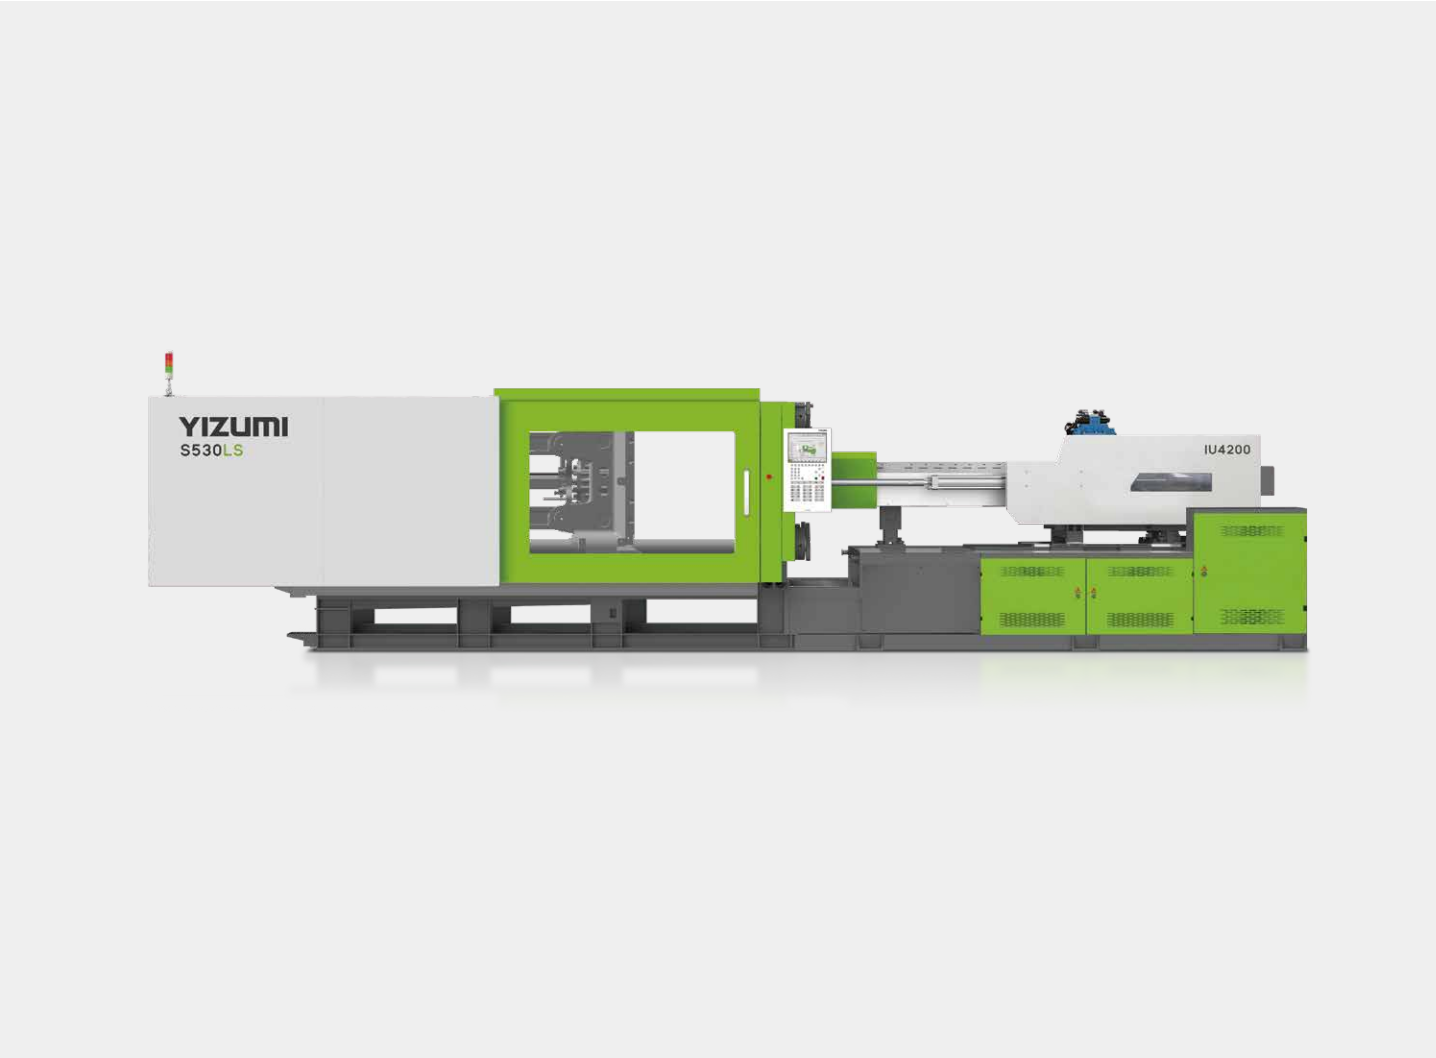

Yizumi International Business Co., Ltd.

Address: No.22-2 Ke Yuan 3rd Road, Shunde, Foshan, Guangdong 528300, China

TEL: 400-802-6888(China) 86-757-2921 9001(Overseas)

Email: imm@yizumi.com

www.yizumi.com

【DISCLAIMER】

[1] YIZUMI reserves the right to modify the product description in the catalogue. Specification might be changed without prior notice.

[2] The picture in the catalogue is for reference only. The real object should be considered as final.

[3] The data in the catalogue is obtained from internal testing in YIZUMI laboratory.

Please refer to the actual machine for the final data. YIZUMI reserves the right of final interpretation upon disputes and ambiguities.



THINK TECH FORWARD

LS Series Injection Molding Machine For Deep-Cavity Product

LS series injection molding machine is applied with a new-type outward toggle clamping unit, largely increasing opening stroke by comparing with conventional clamping unit. Further, LS series IMM covering 530T-1100T model is standardly equipped with servo pump system, proportional valve, relief valve, safety module and KEBA industrial controller.


With large opening stroke, LS series injection molding machine can be widely applied for the production of trash can, plastic drum, outer barrel, and plastic stool. Also it is convenient for applying in-mold labeling and robot pick-up process to satisfy customers' requirement.

Highlight

Clamping force focuses on the platen center, less platen deformation


Clamping force focuses on the platen center, reducing platen deformation.

Improved utilization of clamping force can effectively reduce flash defects and the wear and tear of machine, save energy.

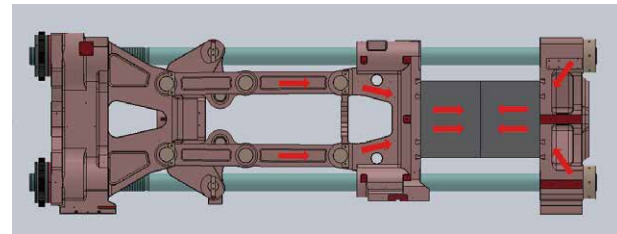

Large opening stroke


25%-35% larger than conventional clamping unit.

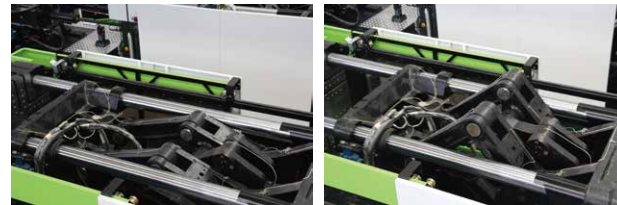

Stable operation, high speed and short dry cycle time

Optimized outward toggle configuration, high velocity ratio and fast operation

Proportional valve and procedural closed-loop control ensure stable mold opening and closing.

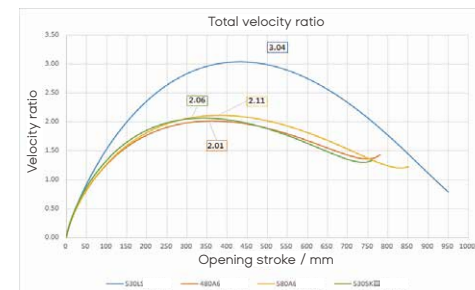

Machine configuration

Fourth-generation servo system

Proven by years of practical application and higher configuration, the third-generation servo system is stable, reliable and durable with characteristic of high efficiency, energy saving, low noise, strong power and fast response.



Upgraded KEBA system

More accurate control of system pressure, flow, position & temperature, as well as more stable overall machine performance.



Highly-efficient mixing screw

Plasticizing efficiency increased by 10%-30%, with plasticizing quality improvement and better mixing effect.



Application case



Square plastic stool

Material: PP
Weight: 970g each
Dimension(L×W×H): 430×340×460mm
Cycle time(Manual pick-up): About 40s
Machine model: S530LS



Plastic bucket

Material: PP (Low MFR)
Weight: 730-790g each
Capacity: 18L
Cycle time: About 20s
Machine model: S680LS

* The data above were acquired by testing in YIZUMI, only for your reference. YIZUMI reserves the right of final interpretation upon disputes and ambiguities.

Specification


Description	UNIT	S530LS				S680LS						S850LS					S1100LS				
Injection model		IU4200				IU5300			IU6790			IU6790					IU9020				
International size		4209/5300				5306/6800			6793/6800			6793/8500					9022/11000				
INJECTION UNIT																					
Theoretical shot volume	cm³	2211.6	2438.3	2924.9	3455.7	2438.3	2924.9	3455.7	3190.9	3769.9	4397.2	3190.9	3769.9	4397.2	5072.6	4319.6	5038.3	5812.4	6749.3		
Shot weight (PS)	g	2034.7	2243.2	2690.9	3179.2	2243.2	2690.9	3179.2	2935.6	3468.3	4054.4	2935.5	3468.2	4045.3	4666.8	3974.0	4635.3	5347.4	6209.4		
	oz	71.9	79.3	95.1	112.3	79.3	95.1	112.3	103.5	122.3	143	103.5	122.3	142.7	164.6	140.2	163.5	188.6	219.0		
Screw diameter	mm	80	84	92	100	84	92	100	92	100	108	92	100	108	116	100	108	116	125		
Injection pressure	MPa	190.3	172.6	143.9	121.8	217.6	181.4	153.6	212.9	180.2	154.5	212.9	180.2	154.5	133.9	208.8	179.1	155.2	133.7		
Injection rate	g/s	545.7	601.6	721.7	852.6	581.2	697.2	823.7	677.6	800.6	933.8	595.7	703.8	820.9	947.0	674.2	786.3	907.1	1053.4		
Screw L:D ratio	-	23.2:1	22:1	21.7:1	20:1	21.9:1	23.5:1	21.7:1	23.5:1	23.4:1	21.5:1	21.7:1	22:1	21.5:1	20:1	21.7:1	22:1	21.5:1	20:1		
Max. injection speed	mm/s	118				114			110.8			97.4					93.3				
Screw stroke	mm	440				440			480			480					550				
Screw speed	r/min	0-160				0-160			0-160			0-145					0-116				
CLAMPING UNIT																					
Clamping force	kN	5300				6800						8500					11000				
Opening stroke	mm	950				1220						1300					1560				
Space between tie bars (W×H)	mm×mm	810x810				930x930						1000x1000					1160x1160				
Max. daylight	mm	1860				2220						2400					2820				
Mold thickness (min.-max.)	mm	350-910				400-1000						450-1100					500-1260				
Ejector stroke	mm	220				280						280					320				
Number of ejector pin holes	-	13				13						21					21				
Ejector force	kN	110				182						182					269				
POWER UNIT																					
Max. system pressure	MPa	17.5				17.5						17.5					17.5				
Oil pump motor	kW	76.4(Air-cooled)				98.4(Air-cooled)			98.4(Liquid-cooled)			88.4(Liquid-cooled)					98.4(Liquid-cooled)				
Heating power	kW	33.1/36.2				41.1/47			45.2/51			45.2/51					56.5/63.6				
Number of temp. control zones	-	6				7			7			7					8				
GENERAL																					
Dry cycle time	s	3.5				5						5					6				
Oil tank capacity	L	690				830						880					970				
Machine dimensions (L×W×H)	m×m×m	8.86x2.03x2.33				10.5x2.23x2.55						10.87x2.43x2.62					12.21x2.62x2.61				
Machine weight	kg	19800				30500						40500					51000				

Note:
1. Theoretical shot volume= barrel sectional area * injection stroke .
2. Shot weight=shot volume * 0.92 (for PS).


Disclaimer:
1. YIZUMI reserves the right to modify the product description in the catalogue. Specification might be changed without prior notice.
2. The pic YIZUMI reserves the right to modify the product description in the catalogue.
3. The data in the catalogue is obtained from internal testing in YIZUMI laboratory.
YIZUMI reserves the right of final interpretation upon disputes and ambiguities.

Platen Dimensions


S530LS

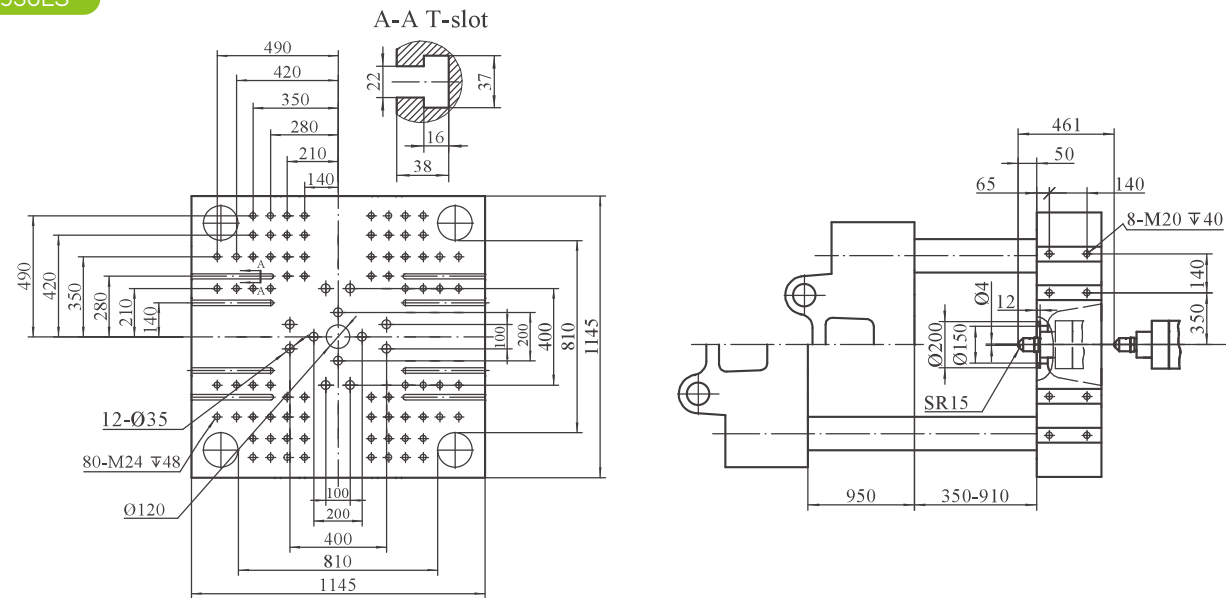


S850LS

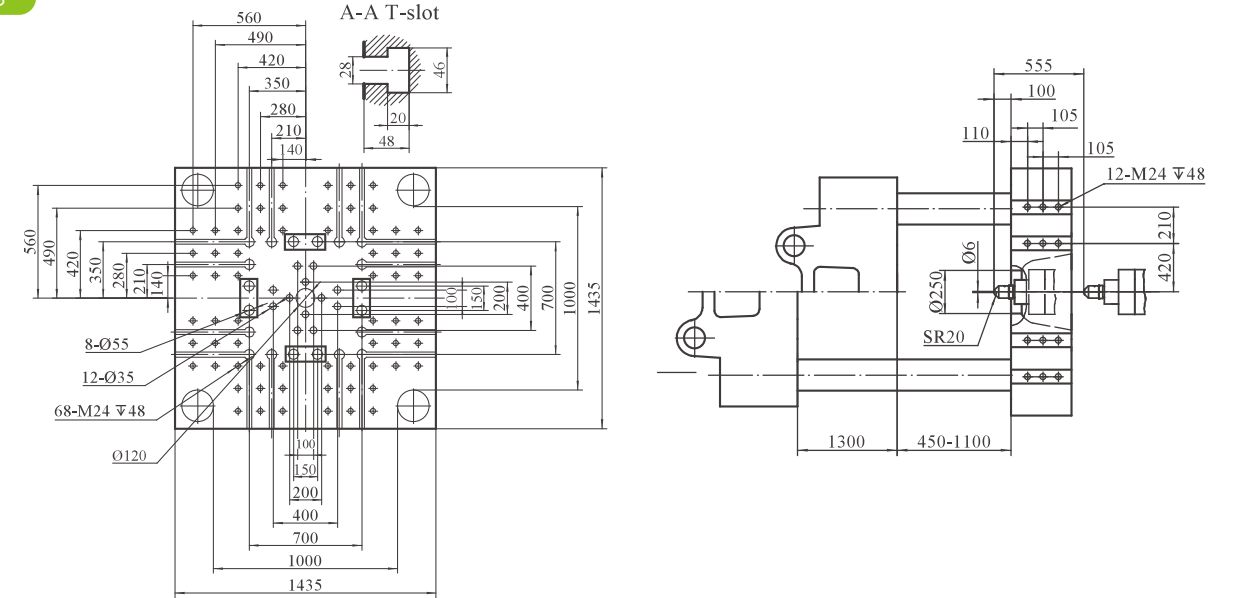

S680LS

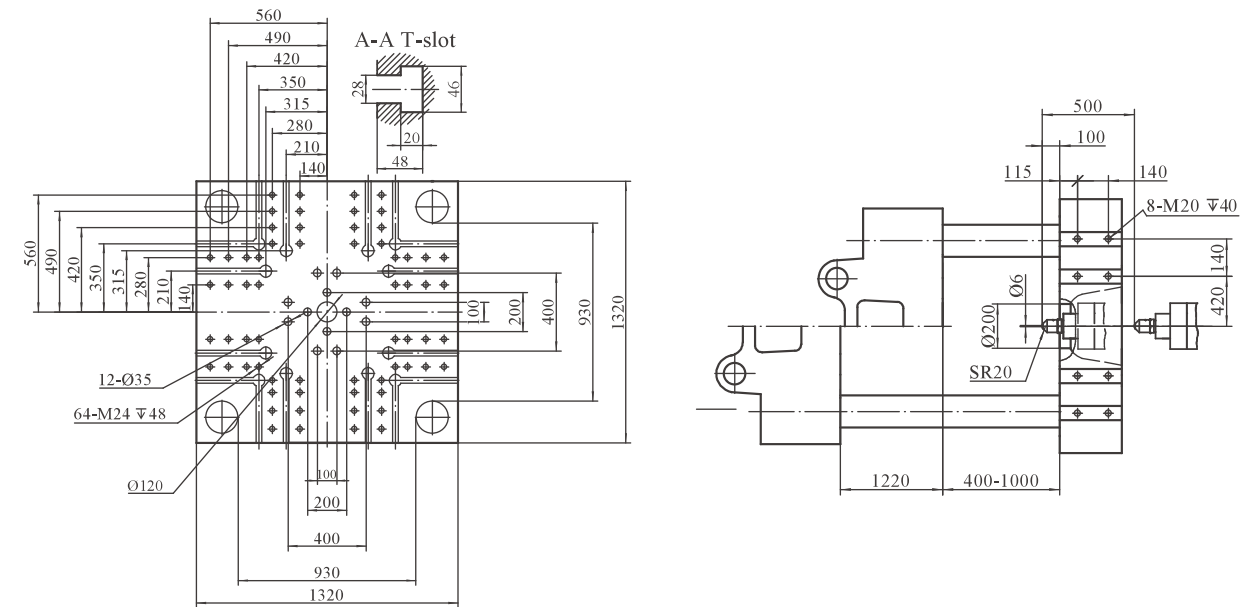

S1100LS

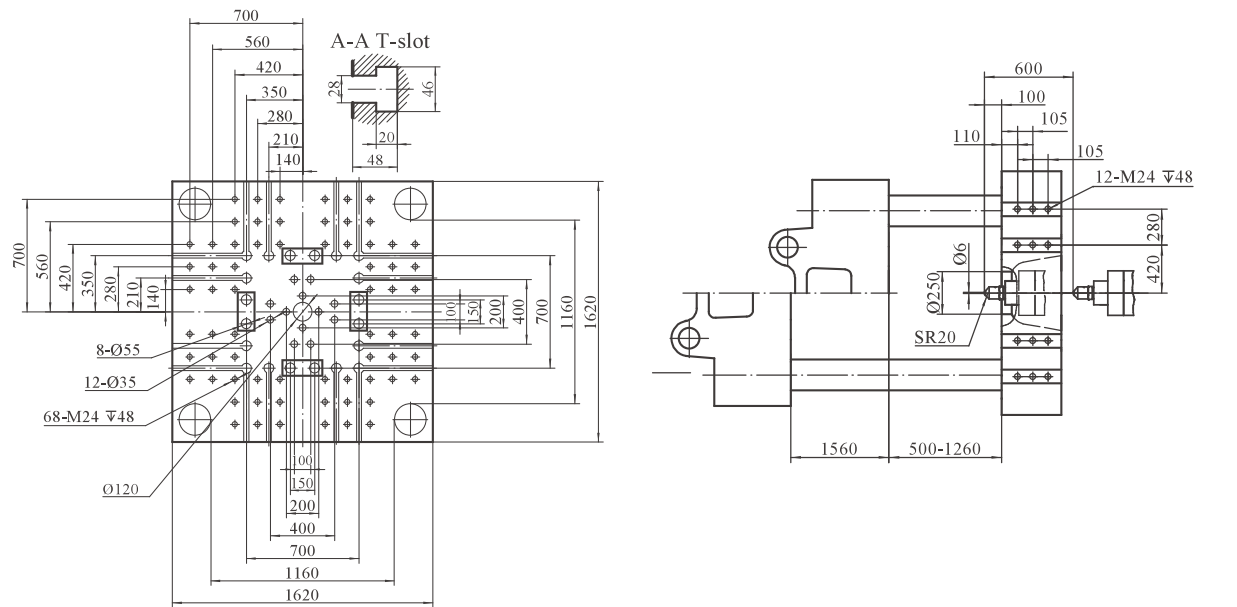


Note:
For S850LS and S1100LS, the outmost ejector pins marked in the drawings are standard either in the horizontal or vertical direction. (Two directions can not be standard at the same time)


* The data above were acquired by testing in YIZUMI, only for your reference.
YIZUMI reserves the right of final interpretation upon disputes and ambiguities.

Machine Dimensions


S530LS

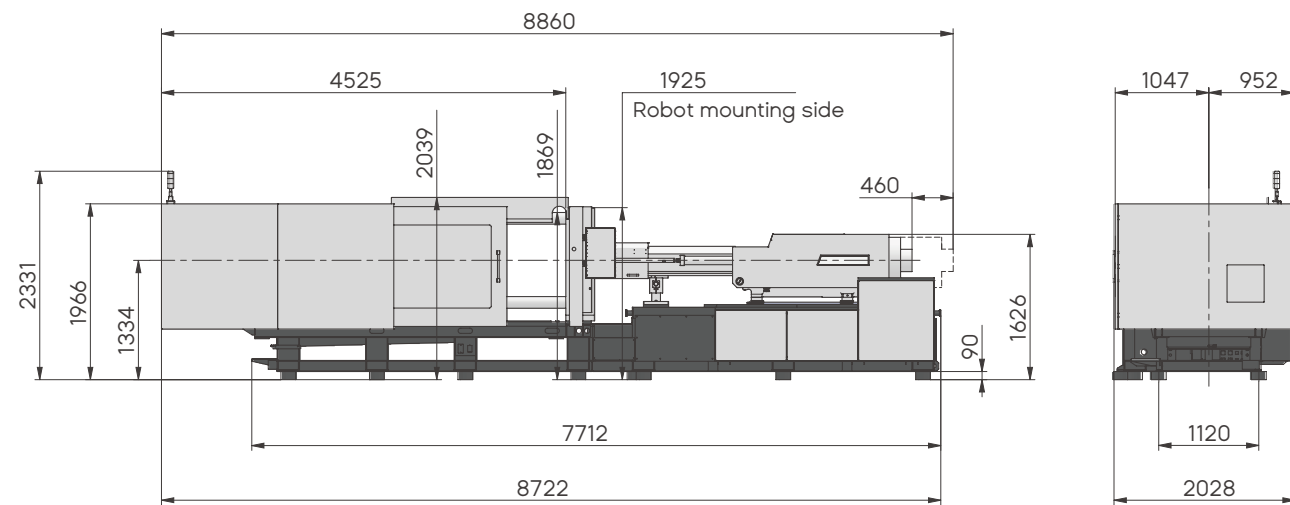


S850LS

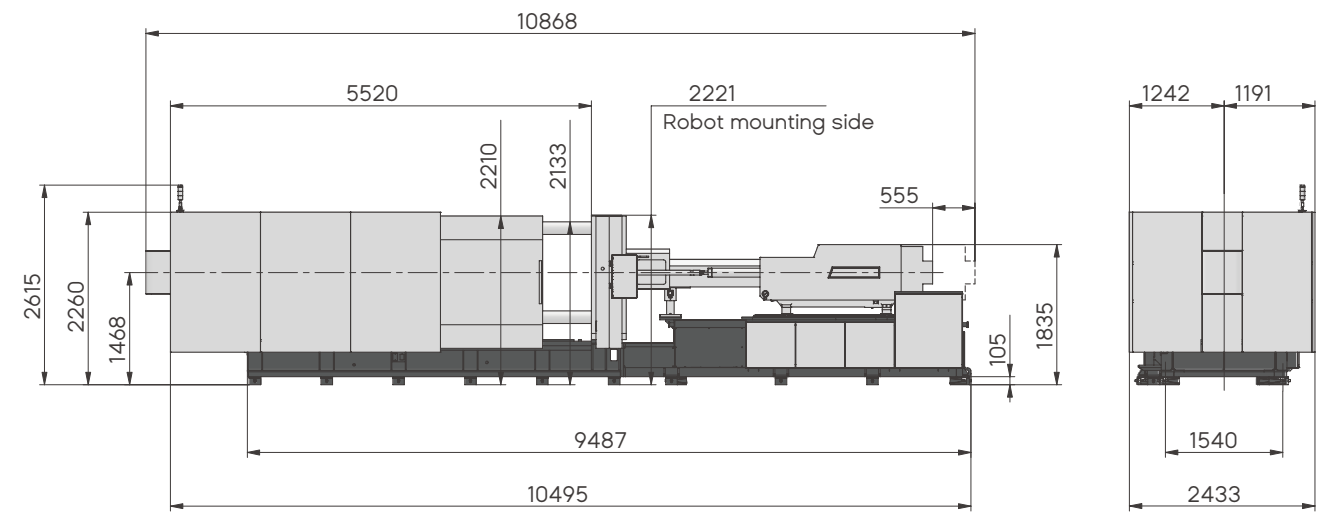

S680LS

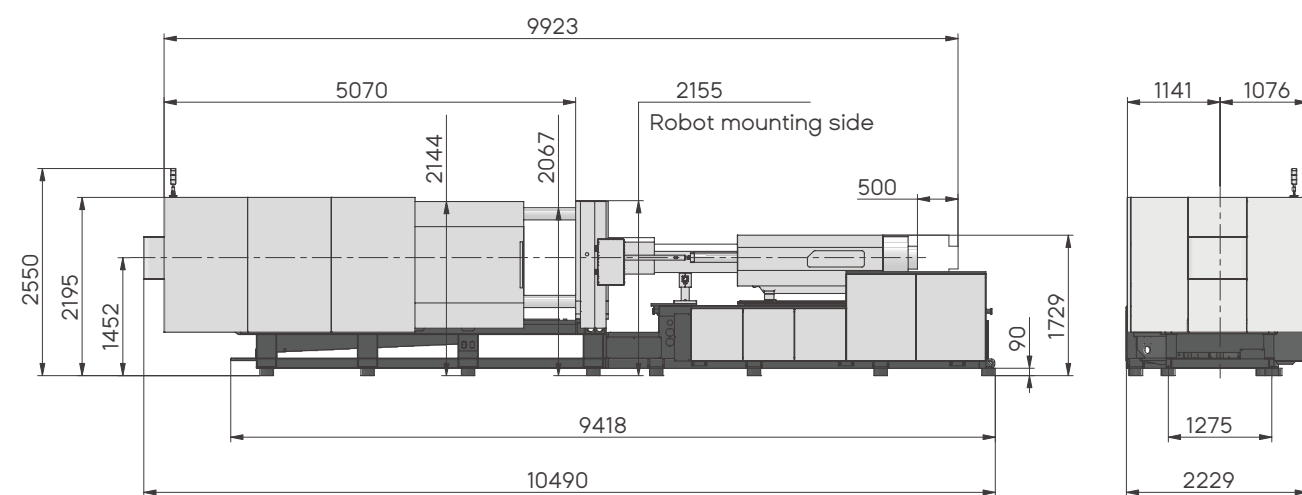

S1100LS

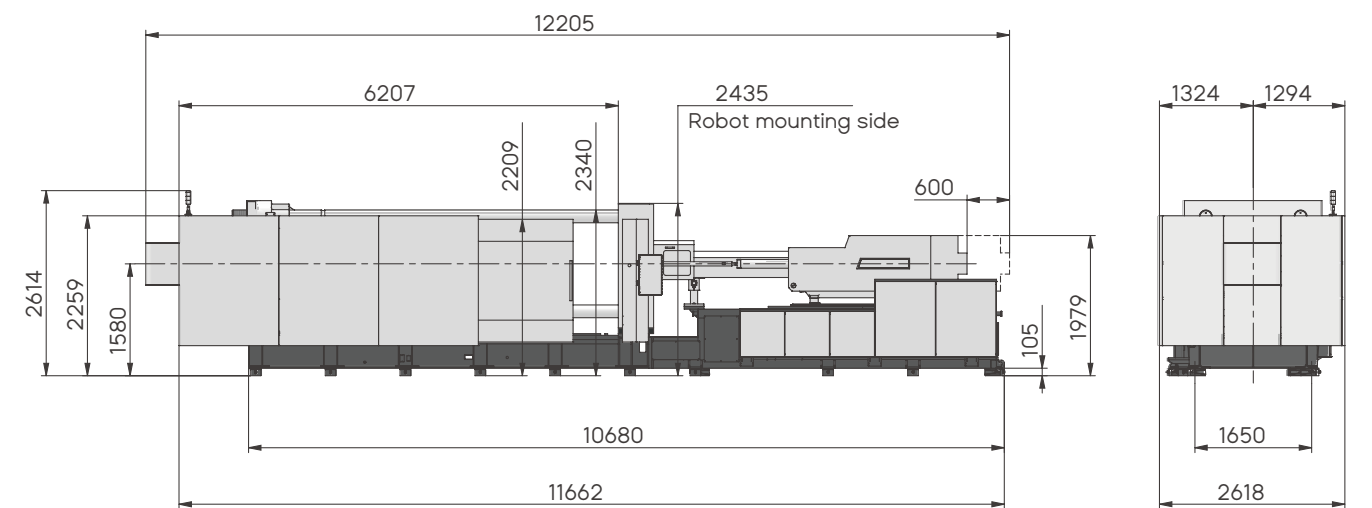

* The data above were acquired by testing in YIZUMI, only for your reference.
YIZUMI reserves the right of final interpretation upon disputes and ambiguities.